


Universal Scale Reading

2.50
11.00
21.00
45.00
62.00
80.00

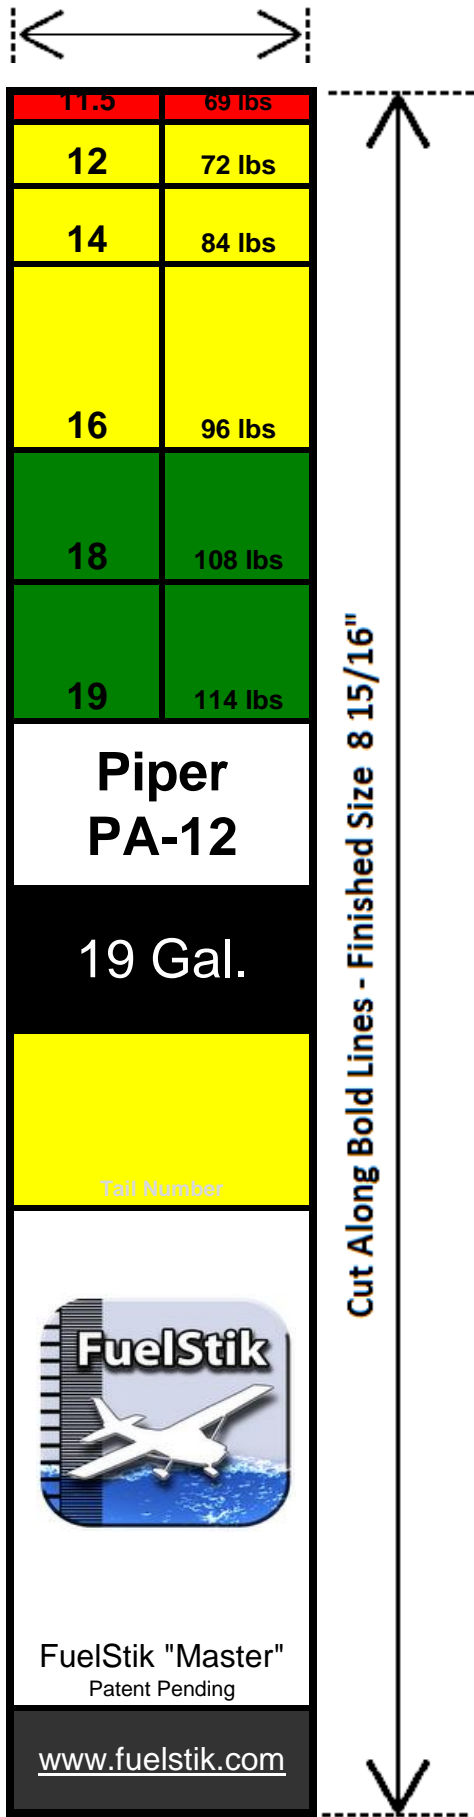

Caution - The operator of the FuelStik "Master" is solely responsible to assure that the correct scale is properly installed in the Float Tube and that through on-ground experience the operator has observed that the quantities shown are accurate. The FuelStick is a secondary means of estimating fuel quantity and in no way is meant to replace the fuel measuring equipment mandated by FAR's or otherwise.